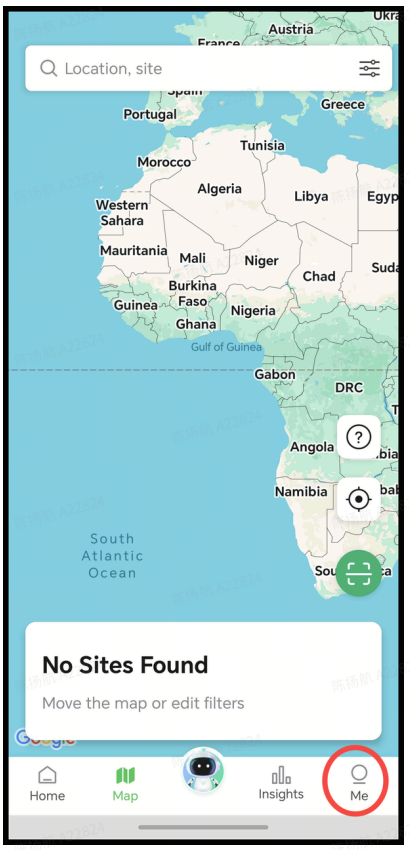
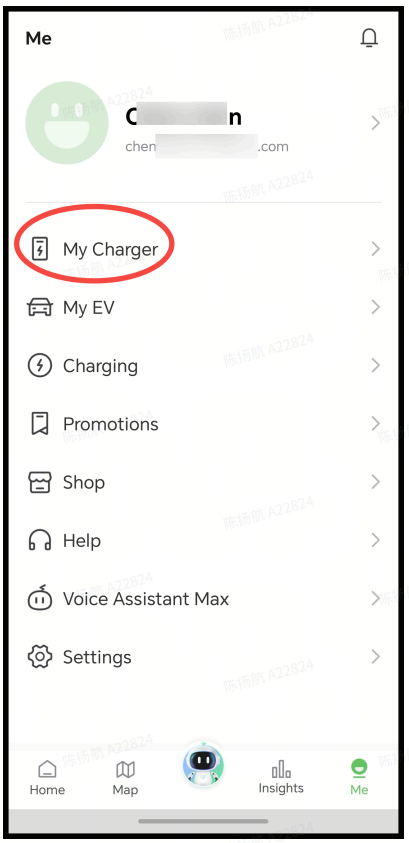
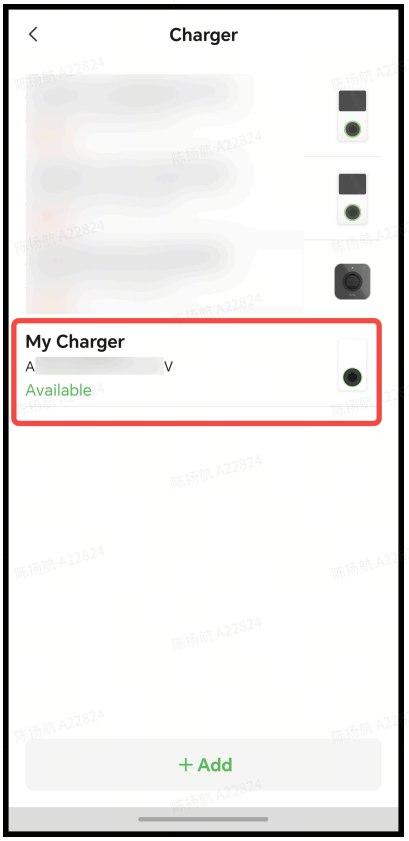
# ALM Mode Set Up for Single CT



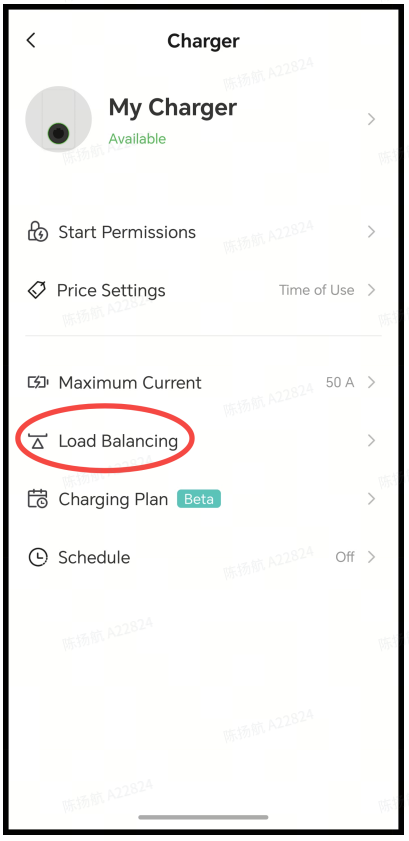

1. Start with "Me"



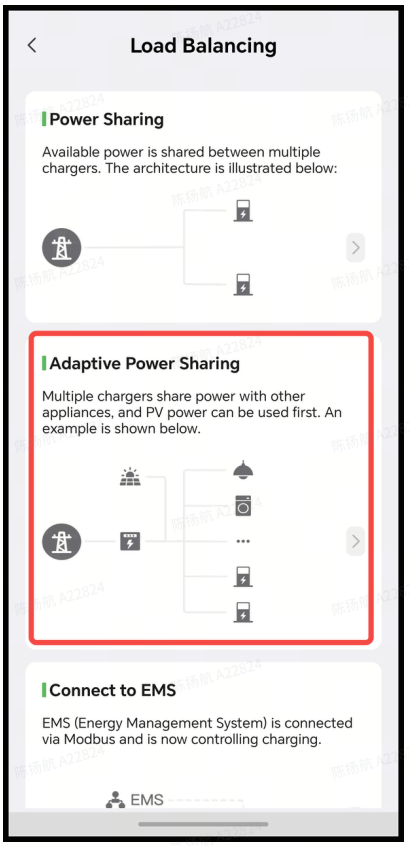

2. My Charger



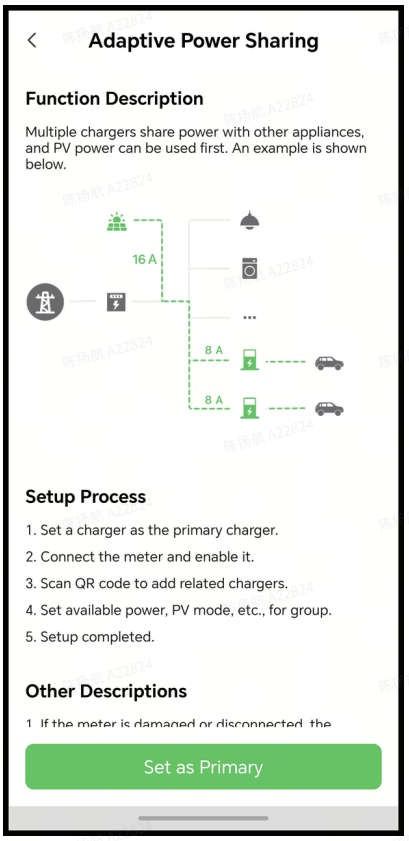

3. Select the Charger



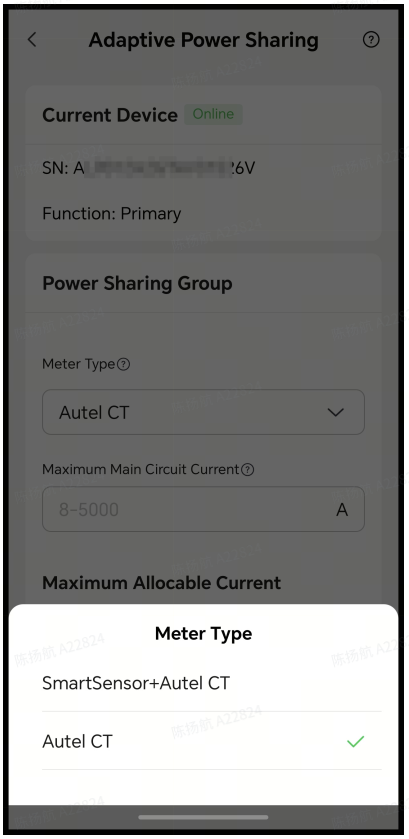

4. Load Balancing



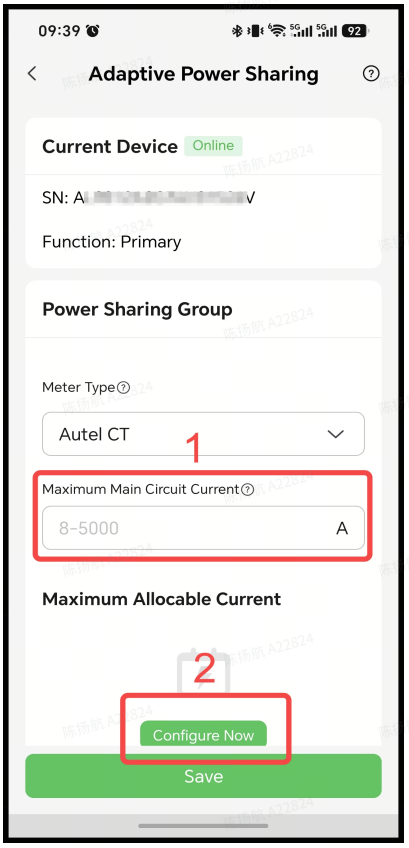

5. Adaptive Power Sharing



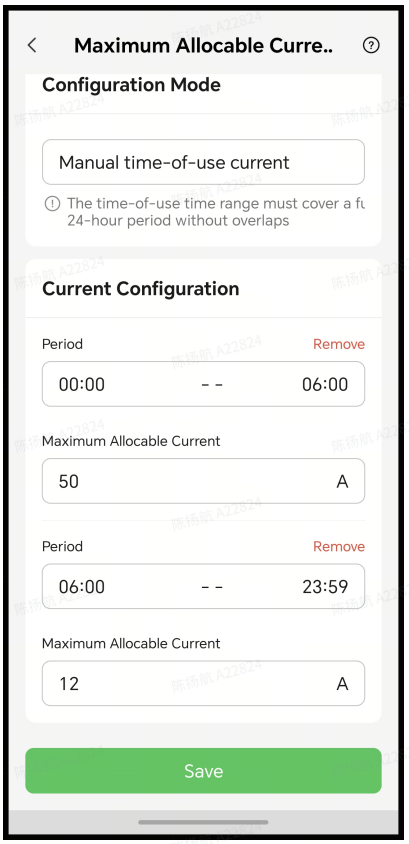

6. Set as Primary



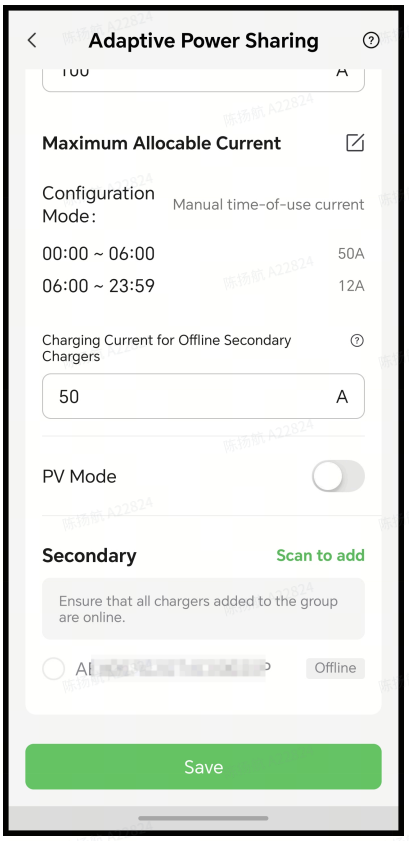

7. Choose "Autel CT"



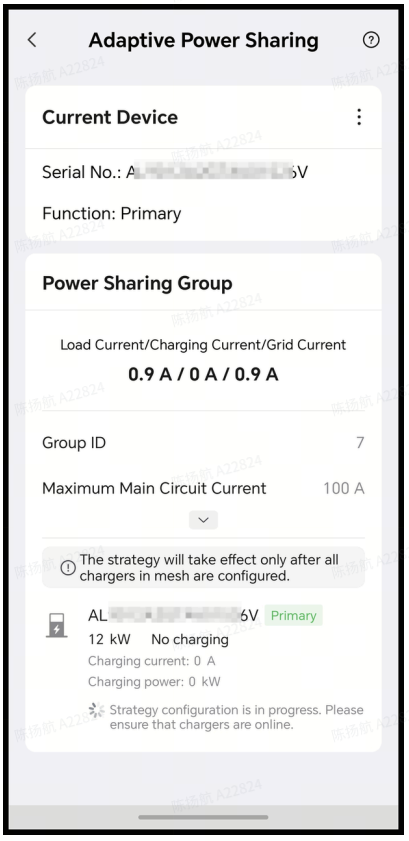

8. Set "Maximum Main Circuit Current" then Click "Configure Now"




9. Set Current Configuration




10. If you don’ t plan to use PV Mode, leave this box unchecked.




11. Activation Success Screen